



Trigger wheel 158 / 15mm (36)

Trigger wheel for which fits aftermarket ECU to get crankshaft signal.
Used in conjunction with a Hall or VR sensor connected to the ECU. Mounting of the trigger wheel must be done on the crankshaft pulley / adapter.
The sensor is then mounted at a distance of about 0.5-1mm to the trigger wheel. The sensor should also be centered on the trigger wheel.

Dimensions:
Material: Steel
Teeth: 36-1
Bolt circle PCD: 99.5mm

Frame: 1 of 1	
Version: 1	
Tel 01746 768810	© JENVEY DYNAMICS LTD. 2021
Web WWW.JENVEY.CO.UK	